



## Detachable Launch Wheels for Inflatable Boat

### Assembly Instructions:

*This product is not to be used on boats over 300 lbs.*

1. Position the metal transom brackets on the boat transom, well apart. Make certain they are clear of any obstruction. The transom brackets should be vertical and set equidistant from the top and bottom of the transom, usually about one inch. However, think this out to make sure the wheels (when fully extended) have enough clearance room to not touch the bottom of the boat.

2. Mark the mounting holes for each transom bracket and then drill through the transom with a 5/6" drill. Secure transom bracket to transom by purchasing and using 5/16" x 2 1/2" bolts (4 total), 5/16" metal washers (8total) and 5/16" nuts (4 total).

*\* Not all launch wheel sets come with hardware*

3. Slide legs of the Wheels (metal let attached to the wheel) into transom brackets and secure with lock pins (provided).

*\*Notice: Some inflatable boats have Rear Spray Guard, some spray guard's, are too large for installing the mount, so you have to cut part of the spray guard first.*

*\*To install the launch wheels properly, you will need to drill 4 holes on the plywood transom for the mount bracket. Please locate the holes' position correctly.*

