



| | | |
|----|----------------------------|---|
| 52 | LEADWIRE-10GASPADE TERN | 1 |
| 51 | SCREW-CLAMP | 2 |
| 50 | PIN-HINGE | 1 |
| 49 | BRACKET | 1 |
| 48 | T-BAR-PLASTIC | 1 |
| 47 | SPRING-T-BAR | 1 |
| 46 | PIN-TILT LEVER | 1 |
| 45 | LEVER | 1 |
| 44 | SCREW-TENSION | 1 |
| 43 | TENSION BLOCK-SNAP IN | 1 |
| 42 | BUSHING-HINGE | 2 |
| 41 | HINGE-PLASTIC | 1 |
| 40 | NUT-PROP NYLOC | 1 |
| 39 | WASHER | 1 |
| 38 | PIN-DRIVE | 1 |
| 37 | PROPELLER | 1 |
| 36 | SEAL SHIELD | 1 |
| 35 | THRU-BOLT | 2 |
| 34 | O-RING | 4 |
| 33 | SEAL | 1 |
| 32 | REAR ENDBELL | 1 |
| 31 | BEARING-FLANGE | 1 |
| 30 | O-RING | 1 |
| 29 | MOTOR MAGNET | 1 |
| 28 | WASHER-NYLON | 1 |
| 27 | WASHER-NYLON | 1 |
| 26 | WASHER-STEEL | 1 |
| 25 | RETAINING RING | 1 |
| 24 | MOTOR ROTOR | 1 |
| 23 | BEARING-BALL | 1 |
| 22 | BRUSH PLATE SCREW | 2 |
| 21 | WASHER-STEEL | 2 |
| 20 | WASHER-STEEL | 2 |
| 19 | BRUSH ASSEMBLY | 2 |
| 18 | SPRING-COMPRESSION | 2 |
| 17 | BRUSH PLATE HOLDER | 1 |
| 16 | SPEED COIL | 1 |
| 15 | FRONT ENDBELL | 1 |
| 14 | TUBE, COMPOSITE | 1 |
| 13 | TENSION BLOCK-SNAP IN | 1 |
| 12 | SCREW-COLLAR | 1 |
| 11 | COLLAR | 1 |
| 10 | SCREW-BATTERY METER | 2 |
| 9 | 5 POINTS LED BATTERY METER | 1 |
| 8 | SWITCH | 1 |
| 7 | SCREW | 1 |
| 6 | PIVOT-HANDLE | 1 |
| 5 | TELESCOPING HANDLE | 1 |
| 4 | SCREW | 6 |
| 3 | CONTROL BOX | 1 |
| 2 | CONTROL BOX COVER | 1 |
| 1 | STICK-COVER | 1 |

PARTY NO. PARTY NAME ACCOUNT